
 


## Assembly Instructions: Astra 2 Single Arm Desk Light

**Parts** 

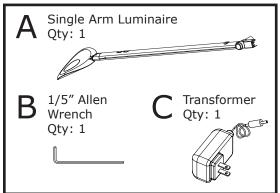

Required, Sold Separately





### Required Tools

A 1/5" Allen wrench is provided to tighten the set screw lock. No other tools are required to assemble the Astra 2.



1 Install Light Mount/Base in desired location.

Refer to the instructions that came with your chosen mount for detailed instructions.












- 2 Attach Lamp to Mounting Post & Tighten Set Screw Lock
- Apply pressure until the Luminaire Arm (A) snaps onto the mounting post. Astra 2 mounts to all bases in the same fashion.
- Tighten Set Screw Lock clockwise with Allen wrench provided. The Set Screw Lock prevents the arm from being able to be removed from the base.

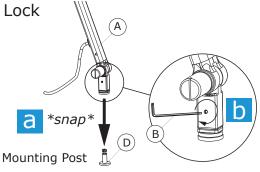

 
- Attach to Transformer and plug into outlet
  - Connect cord from Luminaire Arm (A) to the Transformer (C).
  - Plug Transformer into 100-240 V wall outlet.



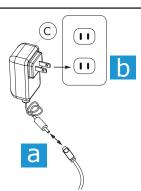



# User Instructions: Astra 2 Single Arm Desk Light

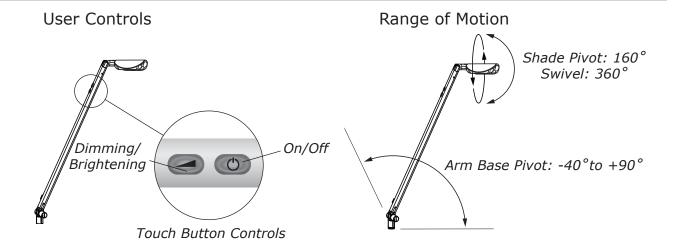

On/Off: Press and release the On/Off button once to turn on or off. Note: The lamp will

return to the same brightness setting it was before being turned off.

**Dimming:** While the lamp is on, press & hold the dimmer button. Dimming will be

continuous down to 5%.

**Brightening:** While lamp is on and dimmed to less than 100% brightness, double tap the

dimming/brightening button. The lamp will return to full brightness.

#### **Auto Shut-Off Programming**

**5 Hour Timer:** Turn the lamp On. Press & hold the On/Off button for 15 seconds, then release

the button. The light will emit a single flash to indicate the 5 hr Auto Shut-Off

has been activated.

10 Hour Timer: Turn the lamp On. Press & hold the On/Off button for 20 seconds, then release

the button. The light will emit a double flash to indicate the 10 hr Auto Shut-

Off has been activated.

Disable Timer: Turn the lamp On. Press & hold the On/Off button for 30 seconds, then release

the button. The light will emit a triple flash to indicate the Auto Shut-Off has

been deactivated.

**NOTE!** The auto Shut-Off Programming will be overridden when an optional

Occupancy Sensor is in use.



#### Parts & Support

Standard Desk Base, SilverLTG-TB-ST-S	
Standard Desk Base, CharcoalLTG-TB-ST-C	
USB Desk Base, SilverLTG-TB-USB-S	
USB Desk Base, CharcoalLTG-TB-USB-C	
Two Piece Clamp, SilverLTG-CCB-TP-S	
Two Piece Clamp, CharcoalLTG-CCB-TP-C	

Tool Bar & Slatwall Mount, Silver......LTG-TSB-ADJ-S
Tool Bar & Slatwall Mount, Charcoal...LTG-TSB-ADJ-C
Astra 2 Occupancy Sensor, Silver.....LTG-OCC-SWVL-S
Astra 2 Occupancy Sensor, Charcoal..LTG-OCC-SWVL-C
Astra 2 Transformer......TR-12240500-A-SF3.5

Technical Support: Please call Workrite Technical Support while at the Workrite product. (800) 969-9675 option 2.