


ergonomics[®]

Assembly Instructions: Astra 2 Double Arm Desk Light

Parts	Required, Sold Separately
A Double Arm Luminaire Qty: 1 B 1/5" Allen Transformer	D Light Mount/Base Qty: 1 or or or or or or
D Wrench Qty: 1	
Required Tools	
A 1/5" Allen wrench is provided to tighten the set screw lock. No other tools are required to assemble the Astra 2.	
1 Install Light Mount/Base in d	
Refer to the instructions that came with your chosen mount for detaile instructions.	
2 Attach Lamp to Mounting Post & Tighten Set Screw Lock	
a Apply pressure until the Luminaire the mounting post. Astra 2 mount same fashion.	
D Tighten Set Screw Lock clockwise provided. The Set Screw Lock prev being able to be removed from the	vents the arm from
3 Attach to Transformer and pl	ug into outlet
Connect cord from Luminaire Arm	(A) to the Transformer cord (B).
D Plug Transformer into 100–240 V	wall outlet.
Note! If attaching light to adjustable heigh worksurface, raise worksurface to the ma height before positioning the fixture to en cord will reach the outlet when worksurfa	sure that



User Instructions: Astra 2 Double Arm Desk Light

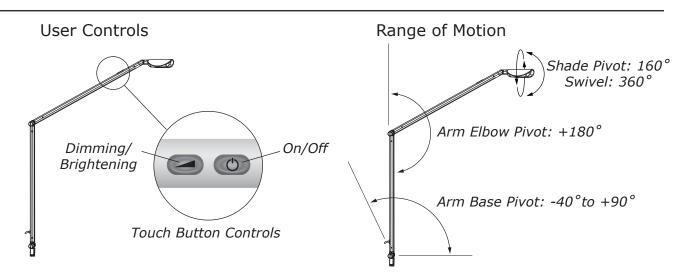

- **On/Off:** Press and release the On/Off button once to turn on or off. Note: The lamp will return to the same brightness setting it was before being turned off.
- **Dimming:** While the lamp is on, press & hold the dimmer button. Dimming will be continuous down to 5%.
- **Brightening:** While lamp is on and dimmed to less than 100% brightness, double tap the dimming/brightening button. The lamp will return to full brightness.

Auto Shut-Off Programming

- **5 Hour Timer:** Turn the lamp On. Press & hold the On/Off button for 15 seconds, then release the button. The light will emit a single flash to indicate the 5 hr Auto Shut-Off has been activated.
- **10 Hour Timer:** Turn the lamp On. Press & hold the On/Off button for 20 seconds, then release the button. The light will emit a double flash to indicate the 10 hr Auto Shut-Off has been activated.
- **Disable Timer:** Turn the lamp On. Press & hold the On/Off button for 30 seconds, then release the button. The light will emit a triple flash to indicate the Auto Shut-Off has been deactivated.
 - **NOTE!** The auto Shut-Off Programming will be overridden when an optional Occupancy Sensor is in use.

Parts & Support

Standard Desk Base, SilverLTG-TB-ST-S Standard Desk Base, CharcoalLTG-TB-ST-C USB Desk Base, SilverLTG-TB-USB-S USB Desk Base, CharcoalLTG-TB-USB-C Two Piece Clamp, SilverLTG-CCB-TP-S Two Piece Clamp, CharcoalLTG-CCB-TP-C Tool Bar & Slatwall Mount, SilverLTG-TSB-ADJ-S Tool Bar & Slatwall Mount, Charcoal ...LTG-TSB-ADJ-C Astra 2 Occupancy Sensor, SilverLTG-OCC-SWVL-S Astra 2 Occupancy Sensor, Charcoal ..LTG-OCC-SWVL-C Astra 2 Transformer......TR-12240500-A-SF3.5

Technical Support: Please call Workrite Technical Support while at the Workrite product. (800) 969-9675 option 2.

1